

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual - Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhususe / Rokasgrāmata - Energoefektivitātes

Table with 12 columns: PF, IT, EN, FR, DE, NL, ES, PT, SV, NO, FI, DK, RU, ET, LV. Rows include product details for FRANKE FMSD508WH, efficiency metrics (AEC, FDE, LE, LEC, GFE, GFEC, Qmin, Qmax, Qboost, SPEmin, SPEmax, SPEboost, P0, Ps, PI, F, Ebep, Qmax, Wbep, WL, Emiddle, Lwa), and technical specifications (WL, Emiddle, Lwa). Includes sections for safety (CONSIGLI PER IL RISPARMIO ENERGETICO), usage instructions (CONSIGLI PER IL RISPARMIO ENERGETICO), and maintenance (CONSIGLI PER IL RISPARMIO ENERGETICO). Reference lists are provided at the bottom.

